
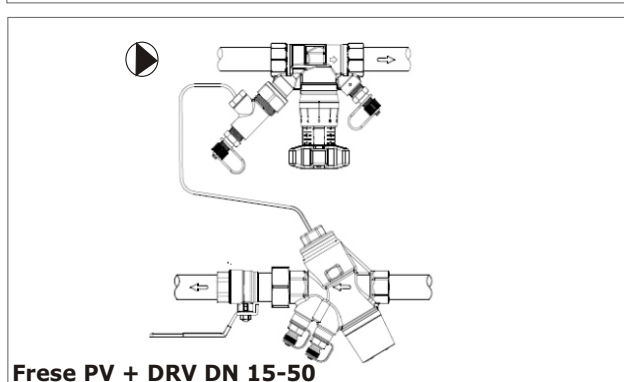
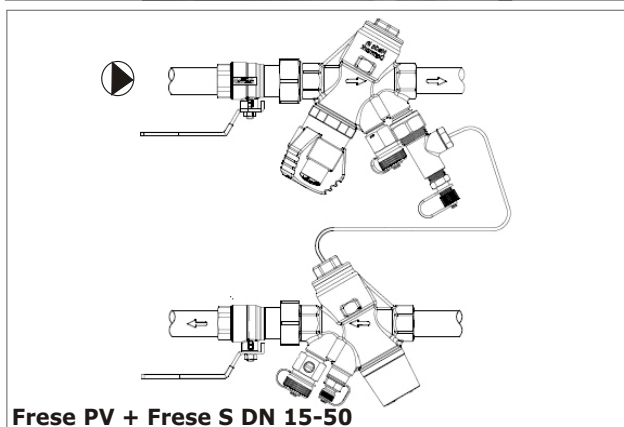
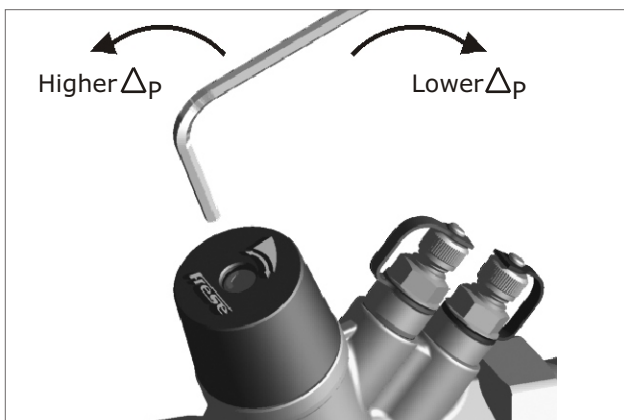
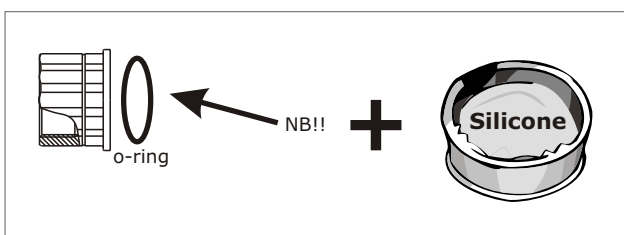


Frese PV


Mounting instructions

Frese A/S : +45 58 56 00 00

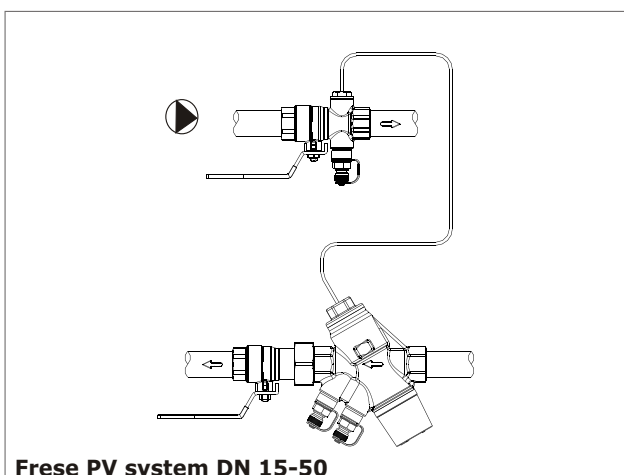


Flow graphs


Frese PV DN15, 5-30 kPa

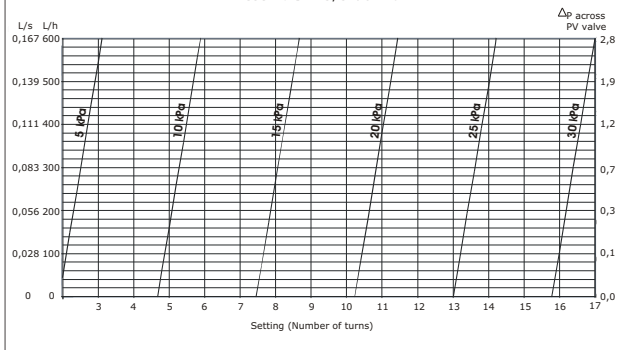


Frese PV DN15, 20-60 kPa

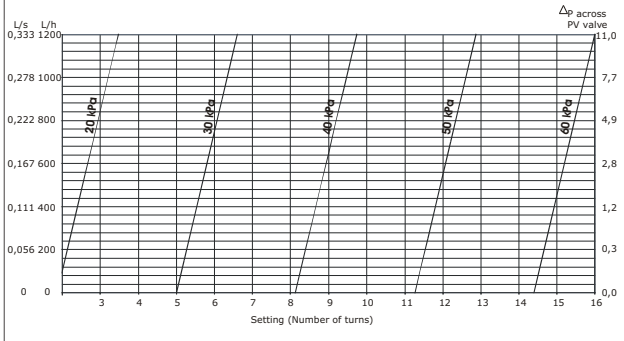


Frese PV DN20, 5-30 kPa

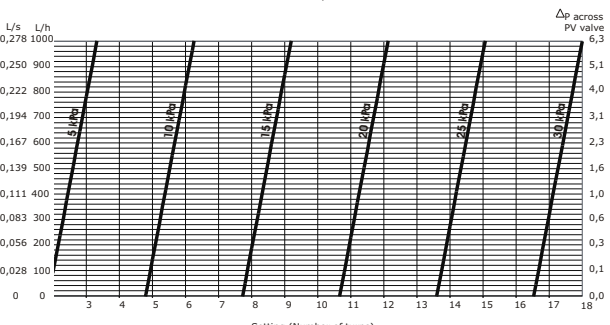


Frese PV DN20, 20-60 kPa

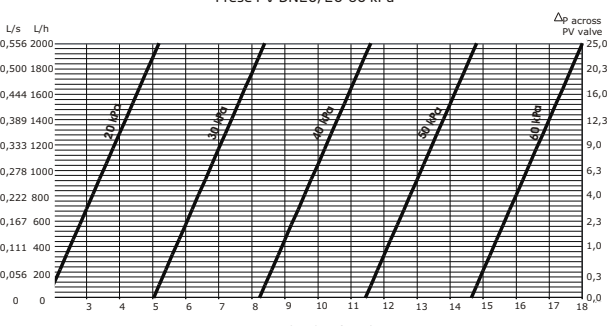


Frese PV DN25, 5-30 kPa

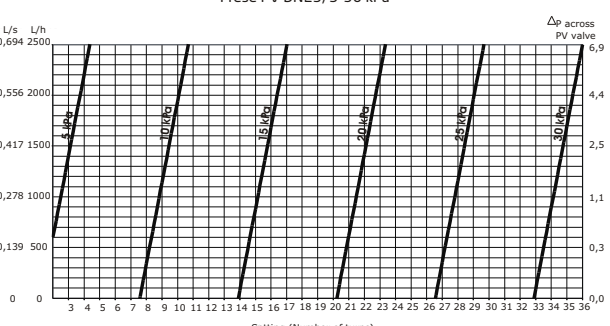


Frese PV DN25, 20-60 kPa

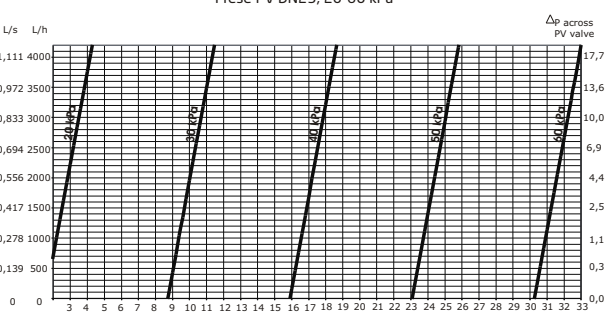

Frese PV DN32, 20-80 kPa

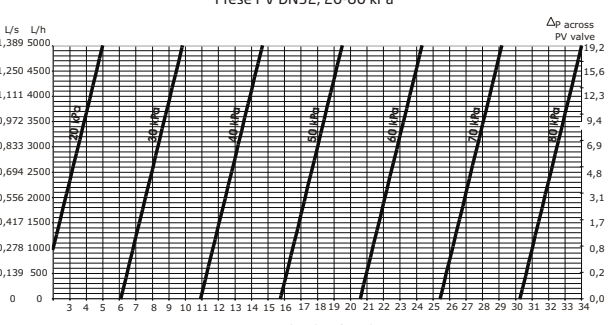

Frese PV DN40, 20-80 kPa

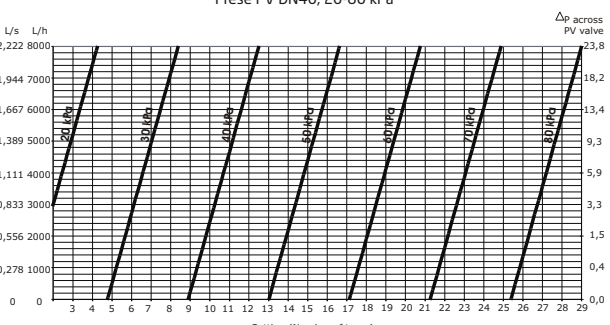

Frese PV DN50, 20-80 kPa

